



Drawer warmer Operation Manual

HBW60

A、 Specifications:

Model	HBW60
Name	DRAWER FOOD WARMER
Voltage (V)	220
Frequency (Hz)	50/60
Power (kW)	1.0
Temperature (°C)	30~110
Size (mm)	635×565×490

B、 Transportation and storage

When being transported, be careful not to shake the machine violently or crash it with anything else; don't put it outdoors or in the direct sunlight for long time. If so, avoid rainfall; store it in breezy and non-corrosive air places; don't put it up side down.

C、 Installation and operation condition

- 1、 The user should install Primary Disconnecting Device and leakage protection whose off-contact is over 3mm in fixed power switch before using. The other object cannot be put around the switch for safe operation.
- 2、 The voltage of power should be the same as the one on nameplate of the unit, the difference cannot beyond $\pm 10\%$.
- 3、 The earth wire in the unit (the yellow and green wire) which is leaded out with power wire should be connected with earth wire (which is) measured up safely in power line unfailingly.
- 4、 The equipotential grounded circuitis set in the backside of the unit. The copper wire is not less than 2.5mm^2 can be used for connection with earth wire which is measured up safely.

Warning: It is strictly forbidden to connect the earth wire with water pipe, gas pipe, central heating pipe and so on, or else it will cause security accidents.

5、 If the mains cord broken, it must be replaced by Model “YCW” or “YZW” oil-proof cable with yellow and green earth wire which is the same specification as the broken one .

6、 All the electricity connection and installation should be done by qualified electrician.

7、 This equipment is not equipped to be used by unwell, unresponsive or mentally disturbed people, including children, unless under the guidance or help of persons who are responsible for their security. Keep an eye on children and keep them away from playing around the equipment.

8、 Take measures to prevent the steamer from falling down when it is placed on a stand.

Warning: Don’t use medium or high pressure regulator to ensure safety. Exhaust fan should be installed to ensure the environment is breezy.

Warning: The temperature of the unit is rising while it is working, it is forbidden to touch! In case any accident caused by spilling out the oil, please keep children away from the unit.

D、 Operation and functions

1. Before putting through machine, please remember get a automatic tone temperature become zero “0” .
2. when puts through machine, indicating lamp is yellow, turn temperature control sphericity nip handlebar to your desired degree, and green indicating lamp already start, then machine starts go job.

3. when temperature range go up degree, automatic tone utensil meeting stop business and green indicating lamp leave, heating wire will stop work. when temperature decline, automatic tone utensil again start go working, and green light at. This process retain take a ride at, goes retain temperature point book's range's so.
4. consumers' energy freely adjustment temperature not more comes out temperature range.
5. whne you want to stops using machine, please remember get the temperature switch become zero places and turn off the power.

Warning: Do not put any tinder (such as towel) on the unit to avoid fire alarm.

E、 Cleaning and maintenance

- 1、 In case the function of the equipment is damaged and possible accident caused, don't wash the machine directly or put it into water for cleaning.
- 2、 Finish working everyday, clean the surface of equipment and wire by using wet towel with non-corrosive detergent.

Warning: Don't clean it by using steam cleaner.

Warning: In order to avoid fire alarm, please cut off the power and shut off the gas valve before cleaning and maintenance.

Accessories: operation manual one copy.