

Installation, Operating and Servicing Instructions

Lynx 400 Electric Bains Marie LBM, LBMW, LBM2, LBM2W, LBM3, LBM3W, LRB, LRBW, LRB2, LRB2W, LRB3, LRB3W

future use:

Date Purchased:

Please make a note of your product details for

Model Number:\_\_\_\_\_

Serial Number:\_\_\_\_\_

Dealer:\_\_\_\_\_



## **CONTENTS**

Important Information	2
Warnings and Precautions	3
Technical Data	3
Checklist of Enclosures	3
Installation and Commissioning	4-5
Operating Instructions	5
Cleaning	5
Servicing, Maintenance and Component Replacement	5
Fault Finding	5
Spare Parts List	6
Service Information and Guarantee	7

## IMPORTANT INFORMATION



Read these instructions carefully before using this product, paying particular attention to all sections that carry warning symbols, caution symbols and notices. Ensure that these are understood at all times.



#### WARNING!

This symbol is used whenever there is a risk of personal injury.



#### **CAUTION!**

This symbol is used whenever there is a risk of damaging your Lincat product.



#### NOTE:

This symbol is used to provide additional information, hints and tips.

#### **KEEP THIS MANUAL FOR FUTURE REFERENCE**

#### **WARNINGS AND PRECAUTIONS**



This appliance must be installed, commissioned and serviced by a qualified person in accordance with national and local regulations in force in the country of installation.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person.

Ensure that the plug/socket is accessible at all times.

Strip plastic coating and clean the appliance before use.

During operation parts may become hot - avoid accidental contact.

Disconnect this appliance before servicing, maintenance or cleaning.

## **TECHNICAL DATA**

Model	Height (mm)	Width (mm)	Depth (mm)	Weight (kg)
LBM, LBMW		285		6 / 7.5
LBM2, LBM2W	196	565		10.5 / 13
LBM3, LBM3W		850	400	14 / 17.5
LRB, LRBW		285	400	6 / 7.5
LRB2, LRB2W	251	565		10 / 13
LRB3, LRB3W		850		14 / 17

## **CHECK LIST OF ENCLOSURES**

Item	Model
Warranty card	
Instructions manual	All
Rubber feet	
1/4 Gastronorms & lids	LBM, LBMW x 2, LBM2, LBM2W x 4, LBM3, LBM3W x 6
Water tank	LBMW, LBM2W, LBM3W, LRBW, LRB2W, LRB3W
Spacers	LBM2, LBM2W x 2, LBM3, LBM3W x 4
8pt pots & lids	LRB, LRBW x 1, LRB2, LRB2W x 2, LRB3, LRB3W x 3
Hobtop insert	LRB, LRBW, LRB2, LRB2W, LRB3, LRB3W

#### **INSTALLATION AND COMMISSIONING**

This appliance must be earthed.

If replacing the plug connect the terminals as follows:

Green and Yellow wire Earth E
Blue wire Neutral N
Brown wire Live L

Supply cords shall be oil resistant, sheathed flexible cable not lighter than ordinary polychloroprene or equivalent elastomer sheathed cord (code 60245 IEC 57)

Push rubber feet into base holes. Install this appliance on a level surface ensuring all vents are unobstructed. Any partitions, walls or furniture must be of non-combustible material. Minimum distances A 100mm B 1000mm – see Fig 1.

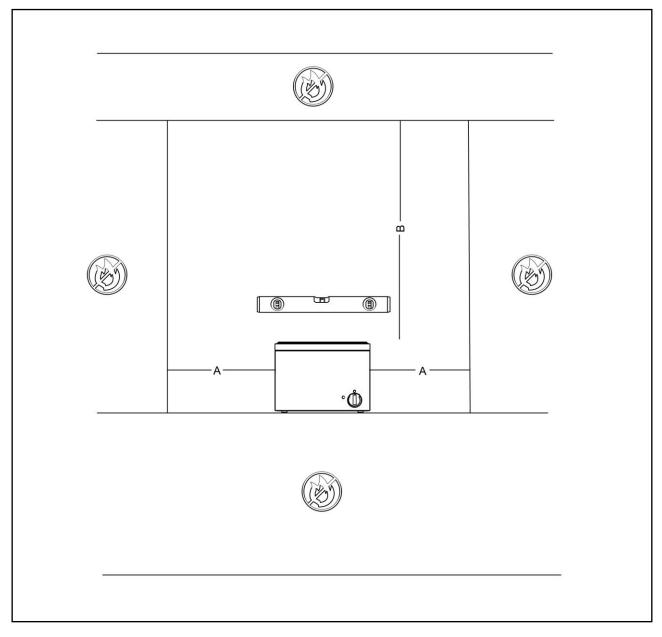


Fig 1

#### **Power Ratings**

Model	kW	Amps
LBM, LBMW	0.25	1.1
LBM2, LBM2W	0.50	2.2
LBM3, LBM3W	0.75	3.3
LRB, LRBW	0.25	1.1
LRB2, LRB2W	0.50	2.2
LRB3, LRB3W	0.75	3.3

#### **OPERATING INSTRUCTIONS**

Only qualified or trained personnel should use this appliance.

Connect the appliance to an electrical supply. The green neon indicates power to the appliance.

For wet well models, fill the tank with water to a level between the minimum and maximum markers at the rear of the tank. Ensure water level is maintained.

Turn the control knob to the desired setting.

## **CLEANING**



Do not use a water jet or steam cleaner, and do not immerse this appliance.

Clean all panels with warm water and mild detergent, do not use abrasive materials. Dry with a soft cloth.

# SERVICING, MAINTENANCE AND COMPONENT REPLACEMENT

All servicing, maintenance and component replacement on this appliance should be carried out by one of our recommended service engineers.

## **FAULT FINDING**

Please refer to the Service Help Desk number on the final page of this manual.

## **SPARE PARTS LIST**

Part Number	Description	Used on
EL214	Element	LBM, LBMW, LRB, LRBW, LRB3, LRB3W,
		LBM3, LBM3W
EL217	Element	LBM2, LBM2W, LRB2, LRB2W, LRB3, LRB3W,
		LBM3, LBM3W
EN10	Energy regulator	
KN237	Control knob	All
NE43	Neon	All
PL201	Plug & lead	
SB24	Support bar	LBM2, LBM2W, LBM3, LBM3W
TA23	Round pot & lid	All LRB models
TA37	Gastronorm lid	All LBM models
TA42	1/4 Gastronorm	All LBM models

#### **SERVICE INFORMATION**

For help with the installation, maintenance and use of your **Lincat** equipment, please contact our service department:

For non-UK customers, please contact your local Lincat dealer

All service work, other than routine cleaning should be carried out by one of our authorised service agents. We cannot accept responsibility for work carried out by other persons.

To ensure your service enquiry is handled as efficiently as possible, please tell us:

- Brief details of the problem
- Product code
- Type number

Serial number

All available on serial plate

Lincat reserve the right to carry out any work under warranty, given reasonable access to the appliance, during normal working hours, Monday to Friday, 08:30 to 17:00.

#### **GUARANTEE**

This unit carries a comprehensive UK mainland 2 year warranty. The guarantee is in addition to, and does not diminish your statutory or legal rights.

The guarantee does not cover:

- Accidental damage, misuse or use not in accordance with the manufacturer's instructions
- Consumable items (such as filters, glass, bulbs, slot toaster elements and door seals.)
- Damage due to incorrect installation, modification, unauthorised service work or damage due to scale, food debris build-up, etc.

The manufacturer disclaims any liability for incidental, or consequential damages. Attendance is based on reasonable access to the appliance to allow the authorised technician to carry out the warranty work.

Service calls to equipment under warranty will be carried out in accordance with the conditions of sale. Unless otherwise specified, a maximum of 15 minutes of administrative time, not spent directly carrying out servicing work, is provided for within the warranty. Any requirement for staff attending the call to spend greater time than 15 minutes due to administrative requirements, such as on health and safety risk assessments, will be chargeable at the prevailing rate.