



Installation, Operating and Servicing Instructions

Opus 800 Electric Chip Scuttle OE8109

Please make a note of your product details for
future use:

Date Purchased: _____

Model Number: _____

Serial Number: _____

Dealer: _____

Opus **800**

CONTENTS

Important Information	2
Warnings and Precautions	3
Technical Data	3
Checklist of Enclosures	3
Installation and Commissioning	4
Operating Instructions	5
Cleaning	5
Servicing, Maintenance and Component Replacement	6-7
Fault Finding	7
Spare Parts List	8
Accessories	8
Service Information and Guarantee	9

IMPORTANT INFORMATION



Read these instructions carefully before using this product, paying particular attention to all sections that carry warning symbols, caution symbols and notices. Ensure that these are understood at all times.



WARNING!

This symbol is used whenever there is a risk of personal injury.



CAUTION!

This symbol is used whenever there is a risk of damaging your Lincat product.



NOTE:

This symbol is used to provide additional information, hints and tips.

KEEP THIS MANUAL FOR FUTURE REFERENCE

WARNINGS AND PRECAUTIONS



This appliance must be installed, commissioned and serviced by a qualified person in accordance with national and local regulations in force in the country of installation.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person.

Ensure that the plug/socket is accessible at all times.

Strip plastic coating and clean the appliance before use.

During operation parts may become hot - avoid accidental contact.

Disconnect this appliance before servicing, maintenance or cleaning.

TECHNICAL DATA

	OE8109
Height (mm)	720
Width (mm)	400
Depth (mm)	800
Weight (kg)	37.0
Infra red lamp rating (kW)	0.5
Tank element rating (kW)	1.0
Total power rating (kW)	1.5
Total current rating (A)	6.5

CHECK LIST OF ENCLOSURES

Warranty card
Instructions manual
Gastronorm tank
Drain plate

INSTALLATION AND COMMISSIONING

This appliance must be earthed.



An equipotential bonding terminal is provided to allow cross bonding with other equipment.

If replacing the plug connect the terminals as follows:

Green and Yellow wire	Earth	E
Blue wire	Neutral	N
Brown wire	Live	L

Supply cords shall be oil resistant, sheathed flexible cable not lighter than ordinary polychloroprene or equivalent elastomer sheathed cord (code 60245 IEC 57)

This appliance is supplied for connection to a standard 13 amp socket.

Install this appliance on a level surface ensuring all vents are unobstructed. Install this appliance on a level surface ensuring all vents are unobstructed. Any partitions, walls or furniture must be of non-combustible material. Minimum distances A 100mm B 1000mm – see Fig 1.

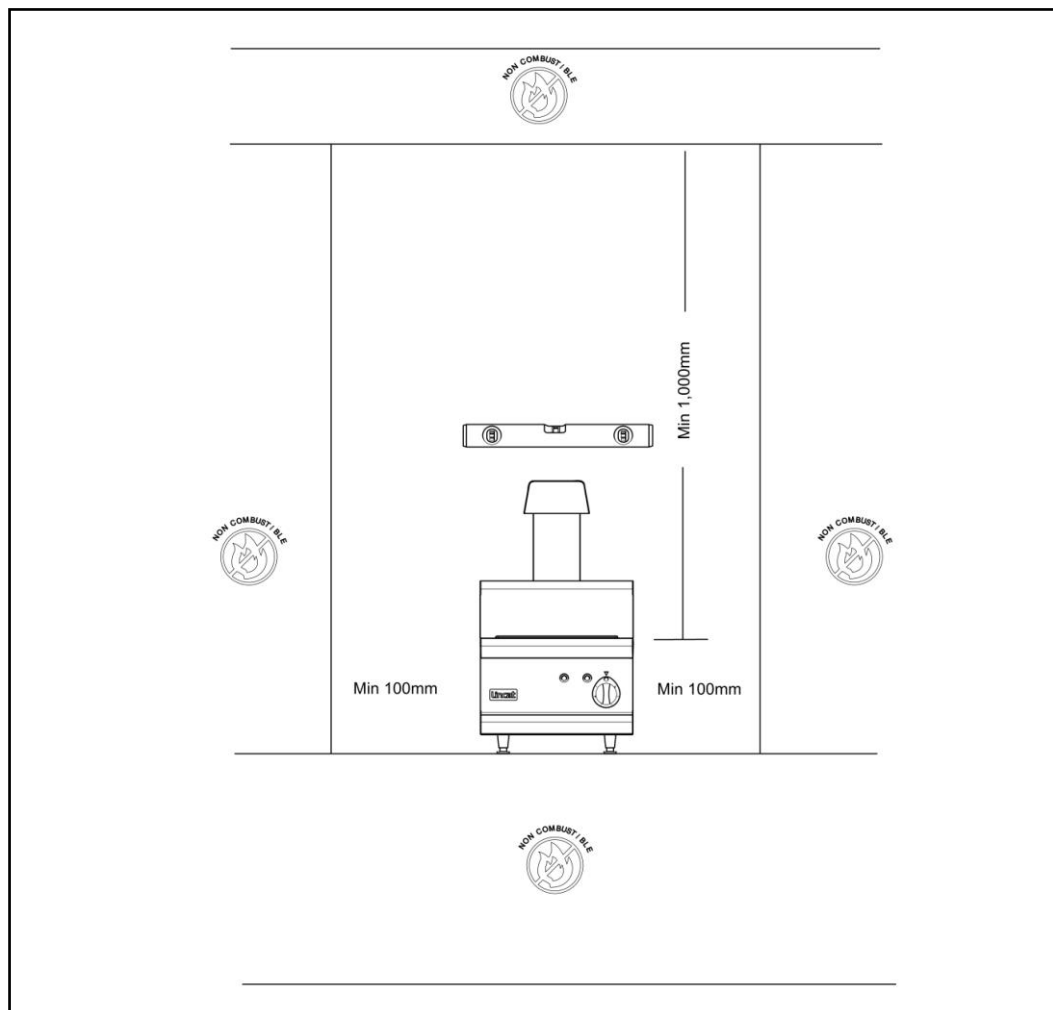


Fig 1

OPERATING INSTRUCTIONS

Only qualified or trained personnel should use this appliance.

This appliance has an insulated tank to enhance performance. During initial operation there may be a noticeable odour from the insulation. This is normal and will diminish with use.

Operation

Turn on the power supply at the isolating switch. The green neon will illuminate indicating power to the appliance.

Turn the control knob to the required setting. The infra red gantry lamp will illuminate and the amber neon will light indicating that the tank element is energised.

The amber neon will extinguish when set temperature is reached, and continue to cycle as the element maintains temperature.

The lamp will remain illuminated until the appliance is switched off.

Shutdown

To shutdown, turn the control knob to the 'Off' position and switch off at the isolating switch.

CLEANING



Do not use a water jet or steam cleaner, and do not immerse this appliance.

The drain plate may be removed for cleaning.

Clean all panels with warm water and mild detergent, do not use abrasive materials or cleaners containing chlorine.

Dry with a soft cloth.

SERVICING, MAINTENANCE AND COMPONENT REPLACEMENT

Your Lincat product has a manufacturer's warranty. This requires you to maintain and care for your product and follow maintenance instructions. If you fail to maintain your unit or damage components Lincat may charge you for a warranty repair. Please check the website for terms and conditions.

The lamp is replaceable by the user. All other servicing, maintenance and component replacement on this appliance should be carried out by one of our recommended service engineers.

Lamp replacement



Never attempt to change a bulb without disconnecting the appliance from the supply and allowing the lamp to cool.

Consult Fig 2.

Be aware before starting that the replacement lamp should not be touched with bare hands. Handle by the end-caps only.

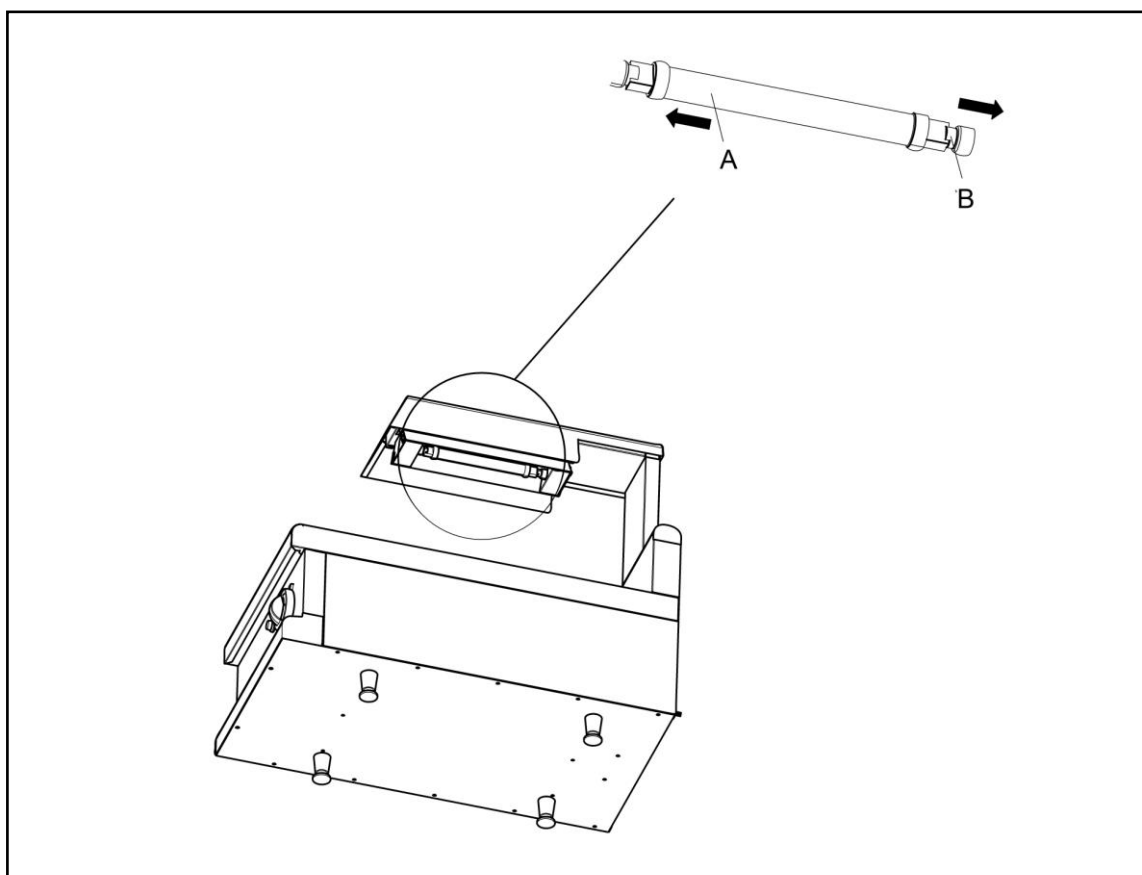


Fig 2

The lamp is of the sprung loaded, push-in type. Remove the bulb by pulling against the spring loaded holder A and lowering out. The process may be eased by using the thumb to push the **ceramic** part of the opposite holder back away from the bulb B. Fit the new bulb by reversing the procedure.

Neon replacement

Remove the control knob. Remove the screws securing the fascia panel to the base panel. Hold the fascia panel at the bottom and remove by rotating forward.

Remove the cables and unscrew the retaining collar to remove the neon.

Fit the new neon by reversing the procedure.

Element replacement

With the fascia panel removed as above, disconnect the cables from the element terminals.

Undo the 2 nuts holding the element terminals and withdraw the element.

Fit the new element by reversing the procedure.

Energy regulator replacement

With the fascia panel removed as above, disconnect the cables from the energy regulator terminals. To avoid confusion, fit each cable to the new regulator as it is disconnected.

Unscrew the old energy regulator from the fascia.

Fit the new energy regulator by reversing the procedure.

FAULT FINDING

Please refer to the Service Help Desk number on the final page of this manual.

SPARE PARTS LIST

Part Number	Description
EL136	Tank element
EN10	Energy regulator
KN511	Control knob
LA210	500W lamp
LA211	Lamp holder
LE38	Leg
NE46	Green neon
NE47	Amber neon
TA71	Gastronorm bowl

ACCESSORIES

Part Number	Description
OA8921	Floor stand
OA8971	Pedestal

SERVICE INFORMATION

For help with the installation, maintenance and use of your **Lincat** equipment, please contact our service department:

☎ UK: 01522 875520

For non-UK customers, please contact your local Lincat dealer

All service work, other than routine cleaning should be carried out by one of our authorised service agents. We cannot accept responsibility for work carried out by other persons.

To ensure your service enquiry is handled as efficiently as possible, please tell us:

- Brief details of the problem
 - Product code
 - Type number
 - Serial number
- } All available on serial plate

Lincat reserve the right to carry out any work under warranty, given reasonable access to the appliance, during normal working hours, Monday to Friday, 08:30 to 17:00.

GUARANTEE

This unit carries a comprehensive UK mainland 2 year warranty. The guarantee is in addition to, and does not diminish your statutory or legal rights.

The guarantee does not cover:

- Accidental damage, misuse or use not in accordance with the manufacturer's instructions
- Consumable items (such as filters, glass, bulbs, slot toaster elements and door seals.)
- Damage due to incorrect installation, modification, unauthorised service work or damage due to scale, food debris build-up, etc.

The manufacturer disclaims any liability for incidental, or consequential damages. Attendance is based on reasonable access to the appliance to allow the authorised technician to carry out the warranty work.

Service calls to equipment under warranty will be carried out in accordance with the conditions of sale. Unless otherwise specified, a maximum of 15 minutes of administrative time, not spent directly carrying out servicing work, is provided for within the warranty. Any requirement for staff attending the call to spend greater time than 15 minutes due to administrative requirements, such as on health and safety risk assessments, will be chargeable at the prevailing rate.