

FRYING OIL QUALITY TEST STRIPS

The convenient, objective test for determining shortening breakdown

DIRECTIONS FOR USE

- 1. Hold test strip by longest white end (max oil temp 40 °C).
- 2. Dip test strip into oil so all colour bands are submerged.
- 3. Hold the test strip in oil for two seconds.
- 4. Remove strip from oil.
- 5. Wait two minutes.
- 6. Compare strip to the colour chart.
- 7. Throw away used test strip.

OIL CUALITY Hast Drops WITHOUT WITHOU

 
IMPORTANT

- · Keep away from light and moisture.
- · Promptly replace cap after taking out strips.
- · Do not remove desiccants.
- · Do not touch test areas of reagent strips.
- · Use test strips within the expiration date.



Test Strip Evaluation Guide





Electronic Temperature Instruments Ltd Worthing · West Sussex · BN14 8HQ 01903 202151 · sales@etiltd.com · etiltd.com