

SOUP WARMER

MODEL SK-105S

OPERATING INSTRUCTIONS




SPECIFICATIONS:

Capacity: 10.5 quart
Voltage: AC 120v, Power: 450w
Weight: 4.65 kgs (10.25 lbs)
Dimension: 36 cm (14") Height x 34.5 cm (13.5") Diameter
Maximum Temperature: 175°F ±20° (80°C ±10°)

OPERATING INSTRUCTIONS:

1. Remove all packaging materials. Clean the inner stainless steel food liner thoroughly.
2. Place the warmer on a stable and leveled surface, clear of any combustible objects nearby.
3. Plug the power cord into proper electrical outlet. LED light indicates that the unit is ON/OFF.
4. To speed up warming, add clean hot water (1 L or 4¼ cup) into the aluminum container up to the MAX line as marked. Do not overfill - remove any excess water immediately.

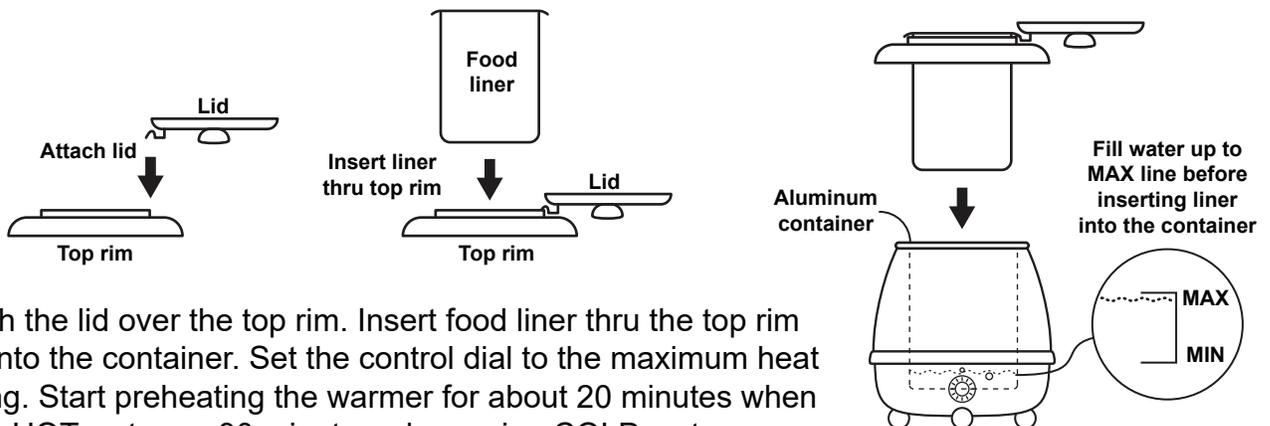

5. Attach the lid over the top rim. Insert food liner thru the top rim and into the container. Set the control dial to the maximum heat setting. Start preheating the warmer for about 20 minutes when using HOT water, or 30 minutes when using COLD water.
6. Pour in precooked hot soup into the liner. Adjust control dial for the desired temperature.
7. Cover soup with lid as needed to maintain temperature when not serving.
8. Periodically remove the food liner to check water level. Add hot water when necessary. Stir soup occasionally for consistency.
9. Turn the dial to 0 to switch off, and unplug the cord from the wall outlet when not in use.

WARNING AND CAUTION:

1. DO NOT OPERATE SOUP WARMER WITHOUT WATER IN THE ALUMINUM CONTAINER.
2. Always keep the removable lid attached and in closed position when not serving.
3. Never move or carry the warmer when it is switched on, or containing hot food.
4. Spilled food should be removed immediately. Wipe off exterior surfaces with a slightly damp cloth. The food liner and the lid are dishwasher safe.
5. Ensure unit is unplugged when not in use, when filling, and when being cleaned.
6. Never clean the unit with a high pressure jet, and never immerse it in water as damage will result and the warranty will be voided.